

VYC TRAILER CLINIC

BEFORE YOU BEGIN: PLEASE SECURE PLASTIC DROP CLOTH BENEATH TRAILER. DON'T FORGET HAT AND SUNSCREEN.

THOSE WHO ARE INTERESTED MAY SIGN-UP, AND PAY, FOR DOLLAR A SLICE PIZZA.

1. Loosen lug nuts.
2. Jack up and secure with jack stand.
3. Remove lug nuts and wheel.
4. Remove dust cover or bearing buddy.
5. Remove cotter key.
6. Remove nut and washer.
7. Check outer bearing.
8. Remove inner bearing and inspect.
9. To remove races place on solid surface and work drift around back of race to remove from hub.
10. To replace race put race on driver and drive into appropriate recess.
11. Pack bearings and place inner bearing on inner race.
12. Install seal on driver and drive in place with mallet.
13. Lubricate inner lip of seal.

Reinstall in reverse procedure.